

Z1175 HAIR INTERCEPTOR – OPERATION and MAINTENANCE INSTRUCTIONS

SIZING

There are no sizing requirements for this interceptor. All units are made with a 1-1/2" [38 mm] standard pipe size inlet and outlet and are capable of handling drainage volumes standard to 1-1/2" pipe size.

DESIGN


The Zurn Z1175 Hair Interceptor is designed to retain the hair from beauty shops, hospitals, or wherever hair clogging of the water system is a problem. The removable perforated stainless steel basket retains the accumulating hair before it can pass through to the sanitary sewer system.

OPERATION

The wastewater flows from the inlet piping into the perforated basket, passing through the perforations in the basket, into the main body chamber, then exits the main body chamber into the sanitary drain system.

MAINTENANCE

Cleaning should be done on a regular basis, either before or after the basket becomes clogged. Unscrew and remove the cast iron, counter-sunk, flanged cleanout cover, gasket, and perforated basket. Remove the accumulated hair and reinstall the basket, gasket, and cleanout cover in the body and tighten cover. Efficiency of operation is directly related to the level of maintenance.

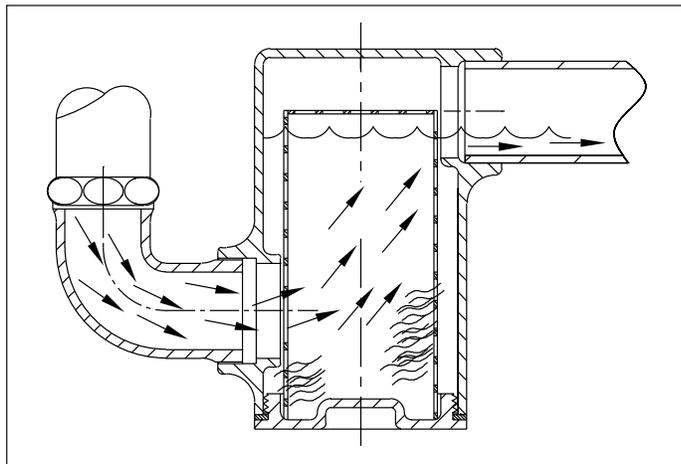

Z1176 HAIR INTERCEPTOR – OPERATION and MAINTENANCE INSTRUCTIONS

SIZING

There are no sizing requirements for this interceptor. All units are made with a 1-1/2" [38 mm] standard pipe size inlet and outlet and are capable of handling drainage volumes standard to 1-1/2" pipe size.

DESIGN

The Zurn Z1176 Hair Interceptor is designed to retain the hair from beauty shops, hospitals, or wherever hair clogging of the water system is a problem. The removable perforated stainless steel basket retains the accumulating hair before it can pass through to the sanitary sewer system.

OPERATION

The wastewater flows from the inlet piping into the perforated basket, passing through the perforations in the basket, into the main body chamber, then exits the main body chamber into the sanitary drain system.

MAINTENANCE

Cleaning should be done on a regular basis, either before or after the basket becomes clogged. Unscrew and remove the cast iron, counter-sunk, flanged cleanout cover, gasket, and perforated basket. Remove the accumulated hair and reinstall the basket, gasket, and cleanout cover in the body and tighten cover. Efficiency of operation is directly related to the level of maintenance.

