


Z1330XL ECOLOTROL WALL HYDRANT WITH CERAMIC DISC – Encased, Anti-Siphon, Automatic Draining, Moderate Climate

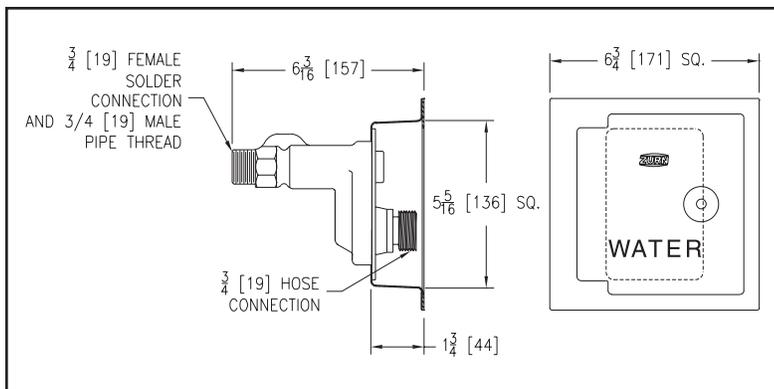

ENGINEERING SPECIFICATION: ZURN Z1330XL Encased, Ecolotrol™, lead-free, anti-siphon, moderate climate / interior wall hydrant for flush installation. Hydrant features integral backflow preventer with anti-siphon technology, all-bronze interior components with 1/2 turn long-life ceramic disc cartridge, combination 3/4" [19] female solder and 3/4" [19] male pipe thread inlet connection, and 3/4" [19] male hose connection. Hydrant furnished with type 304 stainless steel flanged housing with locking hinged cover stamped "WATER" and includes operating key.

Zurn "XL" Lead-Free compliant products are a line of durable plumbing products designed and manufactured to comply with state laws and local codes that mandate maximum allowable lead content levels. Zurn "XL" products are manufactured in accordance to the Federal SWDA section 1417.

Z1330XL Ecolotrol Wall Hydrant With Ceramic Disk

The Z1330XL Ecolotrol ceramic disk hydrant is an encased, anti-siphon, automatic draining wall hydrant designed for commercial applications in moderate climate areas. It is ideal for office buildings, institutions, hospitals, malls and retail outlets, and schools.

Hydrant Features


- **Certification** – IAPMO® listed. Approved under ASSE standard 1011.  
- **Integral Anti-Siphon Vacuum Breaker/Backflow Preventer** – Unique design utilizes an internal Equa-Balance® seal to prevent contamination of the potable water supply through back siphonage. The use of an additional hose-connection vacuum breaker with ASSE 1011 approval is not necessary.
- **Ceramic Valve Cartridge** – One-piece assembly, ceramic disk cartridge controls the flow through the hydrant with a maximum one-half (1/2) turn operation.
- **Operating Screw** – Chrome-plated brass operating screw operates the valve cartridge and controls the drainage of the hydrant with use of an orificed retaining washer. Allows air intake to facilitate draining of the hydrant when in the closed position.
- **Operating Tube** – 3/8" [10 mm] seamless brass tubing.
- **Faceplate** – Constructed of type 304 stainless steel with brush finish and air intake port.
- **Box and Cover** – Stainless steel box and hinged cover with operating key lock and "WATER" stamping.
- **Drainage** – Through circular drain ports of the nozzle.
- **Approximate Shipping Weight** – 4 lbs. [2 kg]
- **Operating Pressures** – Minimum running pressure 8 psi. Maximum static pressure 125 psi.
- **Temperature Range** – Minimum 33°F. Maximum 130°F.

OPTIONS


SUFFIXES

- CL Cylinder Lock
- NB Polished Nickel Bronze Face
- PB Polished Bronze Face
- RK Hydrant Parts Repair Kit
- RT12 Ceramic Cartridge Removal Tool (Up to 12" [305 mm] Wall)
- 34EL 3/4" [19 mm] 90° Solder Inlet Elbow
- 34FIP 3/4" [19 mm] IP Straight Female Inlet Adapter

Inlet Descriptions

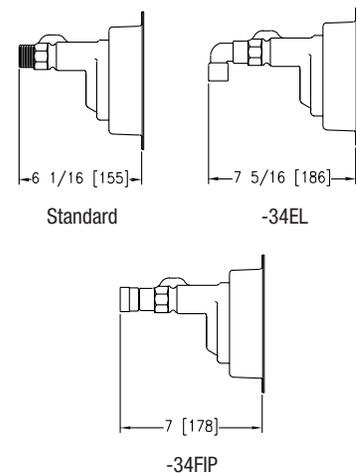


Z1330XL ECOLOTROL WALL HYDRANT WITH CERAMIC DISC Parts Assembly and Parts List

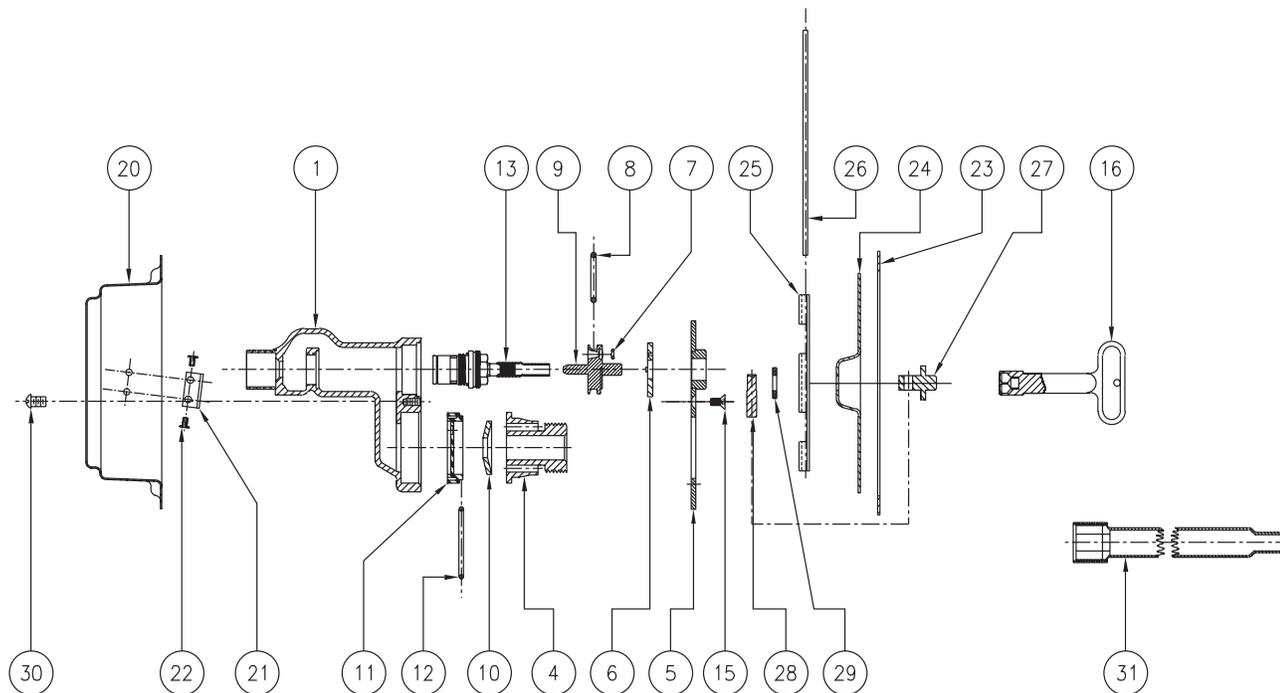

Z1330XL Parts List

| Item | Description | Qty. | Part No. |
|------|-------------------------|------|-----------|
| 1 | Head | 1 | 60703-XL4 |
| 4 | 3/4" Nozzle | 1 | 50799-XL1 |
| 5 | Faceplate | 1 | 56115-XL8 |
| 6 | Retaining Washer | 1 | 60228-001 |
| 7 | O-Ring | 1 | 23750-232 |
| 8 | O-Ring | 1 | 23750-028 |
| 9 | Operating Coupling | 1 | 60227-XL2 |
| 10 | Equa-Balance Seal | 1 | 50785-001 |
| 11 | Disc | 1 | 50819-001 |
| 12 | Disc O-Ring | 1 | 23750-204 |
| 13 | Cartridge/Tube Assembly | 1 | 61402-XL1 |
| 15 | Faceplate Screw | 5 | 22698-047 |
| 16 | Key | 1 | 59546-001 |
| 20 | Hydrant Body | 1 | 56186-001 |
| 21 | Lock Clip | 1 | 52033-002 |
| 22 | Lock Clip Rivet | 2 | 56201-002 |
| 23 | Frame | 1 | 56185-001 |
| 24 | Hydrant Cover | 1 | 56187-002 |
| 25 | Hinge Bracket | 1 | 58482-001 |
| 26 | Hinge Pin | 1 | 58483-001 |
| 27 | Locking Pin Mouting | 1 | 25306-001 |
| 28 | Locking Pin | 1 | 25307-001 |
| 29 | Washer | 1 | 61631-001 |
| 30 | Screw #10-24 N.C. | 2 | 14853-042 |
| 31 | Cartridge Wrench (OPT) | 1 | 62078-001 |

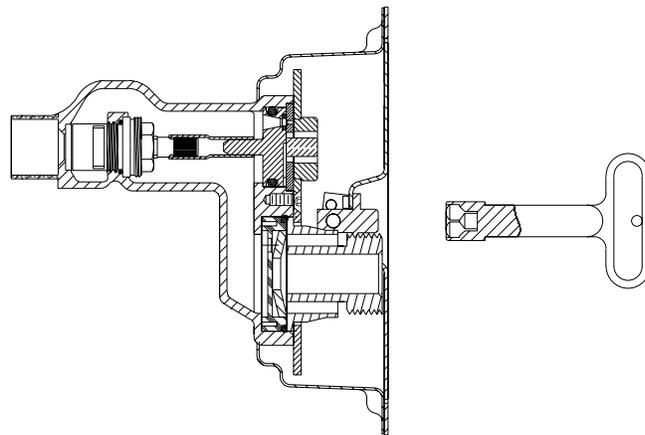

*Items are available in -RK Repair Kit Option Bag (#66955-340-9).

Z1330XL ECOLOTROL WALL HYDRANT WITH CERAMIC DISC Troubleshooting Guide

| PROBLEM | CAUSE | SOLUTION |
|--|--|--|
| Hydrant will not operate when turned on. | Water supply is shut off. | Turn on water supply. |
| Cannot turn the hydrant on with key. | Retaining washer is not properly orientated. | See “Orientating the Retaining Washer” below. |
| | Hydrant hasn’t been used for a long time – O-Ring has adhered to the operating screw and head. | Follow steps 1-2, 4-5, and 8-10 of the Service Guide. |
| | Ceramic disc is broken and jammed. | Follow steps 1-2, 4, and 6-10 of the Service Guide. |
| Water sprays from holes around nozzle when hydrant is on. | Equa-Balance® seal is damaged. | Follow steps 1-3 and 8-10 of the Service Guide. |
| Water sprays through the faceplate’s keyway drainage port when the hydrant is on. | Retaining washer pin is not properly orientated into operating coupling groove. | See “Orientating the Retaining Washer” below. |
| | Operating coupling’s O-Ring or air relief orifice O-Ring is damaged or missing. | Follow steps 1-2, 4-5, and 8-10 of the Service Guide. |
| Hydrant will not self-drain when it is shut off (hose and hose nozzle are attached). | The orifice in the operating coupling, retaining washer, or both is blocked. | Follow steps 1-2, 4 (using a paper clip, evacuate debris from orifice), and 8-10 of the Service Guide. |
| | Operating coupling is not properly orientated. | See “Orientating the Retaining Washer” below. |
| Water does not shut off completely when hydrant is turned off. | Retaining washer is not properly orientated. | See “Orientating the Retaining Washer” below. |
| | Cartridge assembly is loose or damaged. | Follow steps 1-2, 4 (then check that the cartridge assembly is tightly seated), and 6-10 of the Service Guide. |
| | Debris in the ceramic disc, or disc is broken and jammed. | Follow steps 1-2, 4, and 6-10 of the Service Guide. |
| Hydrant exhibits low flow. | Water supply to the hydrant is restricted. | Check water supply to ensure that all upstream valves are fully open. |
| | Retaining washer is not properly orientated. | See “Orientating the Retaining Washer” below. |
| | Cartridge assembly is damaged or debris in the ceramic disk. | Follow steps 1-2, 4, and 6-10 of the Service Guide. |

Orientating the Retaining Washer

If hydrant performance is hindered by the orientation of the retaining washer (**see Troubleshooting Guide**) then follow these simple steps:

Step 1: Turn water supply to hydrant off.

Step 2: Loosen the five faceplate screws (#15) (DO NOT COMPLETELY REMOVE).

Step 3: Use the operating key to gently cycle the hydrant from OFF to ON and back to OFF again (180° OF ROTATION).

Step 4: Tighten the five faceplate screws (#15) until screws are snugged tight (by hand only).

⚠ **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov
 ⚠ **ADVERTENCIA:** Cáncer y daño reproductivo - www.P65Warnings.ca.gov
 ⚠ **AVERTISSEMENT:** Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Z1330XL ECOLOTROL WALL HYDRANT WITH CERAMIC DISC Service Guide

Step 1: Shutting Off the Water Supply to the Hydrant

Locate the supply shut-off valve and rotate until water supply is off.

Step 2: Removing the Faceplate and Adjacent Components

Using 1/8" Allen wrench, remove the five faceplate screws (15) from head (1) by turning counterclockwise. Remove the faceplate (5), nozzle (4) and retaining washer (6).

If the Equa-Balance® seal was not the reason for service – skip to step 4.

Step 3: Replacing the Equa-Balance® Seal

Remove the current Equa-Balance® seal (10). Check seal for damage (punctures, rips, etc.). Replace damaged seal with a new seal (10) observing proper orientation (EQUA-BALANCE® SEAL SHOULD CUP INWARD IN ITS REPLACED STATE.)

Step 4: Removing the Operating Coupling

The operating coupling (9) can be removed by gripping the 5/16" square end of the operating coupling (9) with a pair of pliers and gently (being careful not to damage the O-Ring) pulling straight out until the coupling (9) breaks free from the operating tube (13).

If the operating coupling, O-Ring and the air relief orifice O-Ring were not the reason for service – skip to step 6.

Step 5: Replacing the Operating Coupling O-Ring, and the Air Relief Orifice O-Ring

Slip the old O-Ring (8) off, and replace with new O-Ring (8). Remove the old air relief orifice O-Ring (7) and replace with new air relief orifice O-Ring (7).

If the cartridge and operating tube assemblies were not the reason for service – skip to step 8.

Step 6: Removing the Cartridge and Operating Tube Assemblies

Insert the 17 mm cartridge wrench (31) into the hydrant, and over the operating tube (13) until it stops, then with gentle forward pressure, turn the cartridge wrench (31) clockwise until it engages the hex portion of the cartridge assembly (14). Then rotate cartridge wrench (31) counterclockwise, unscrewing the cartridge assembly (14) until the cartridge assembly (14) is free from the head (1). Remove the cartridge wrench (31) with the cartridge and operating tube assemblies (13-14). **IMPORTANT:** Ensure that the entire cartridge assembly is removed and that the housing seating area is free of debris.

Step 7: Installing Cartridge and Operating Tube Assemblies

Place the cartridge and operating tube assemblies (13-14) into the cartridge wrench (31) so that the operating tube (13) is inside of the cartridge wrench (31), and is engaged on the hex portion of the cartridge assembly (14). Insert the cartridge wrench (31) with the cartridge and operating tube assemblies (13-14) into the hydrant until making contact with the head (1), then rotate the cartridge wrench (31) clockwise screwing the cartridge assembly (14) in until it stops, then torque to 15 ft/lbs. (Make sure that the cartridge assembly is in the off position.)

Step 8: Installing the Operating Coupling and Retaining Washer

Orient the operating coupling (9) so that the air relief orifice is in the uppermost position. Press the operating coupling (9) firmly into the head (1) and the operating tube (13). (NOTE: Lubricate the operating coupling O-Ring (8) with Lubriplate FGL-2 if needed.) Insert the retaining washer (6) onto the operating coupling (9) ensuring that the guide pin fits into the operating coupling (9) groove properly and that the air relief orifice is aligned with the operating coupling (9) air relief orifice. (If necessary, lubricate lightly between the operating coupling (9) and retaining washer (6) with Lubriplate FGL-2 for smoother operation.)

Step 9: Replacing the Faceplate

Insert nozzle (4) into place and fasten the faceplate (5) to head (1) using the 1/8" Allen wrench and the five faceplate screws (15). Rotate the screws clockwise until screws are snugged tight. (By hand only!)

Step 10: Turning On the Water Supply

Locate the water supply shut-off valve and rotate until water supply is on.

| Z1330XL Ecolotrol Wall Hydrant with Ceramic Disc – 3/4" Hose Connection | | | | |
|---|------------------------------|-------------------------------|-----------------|---------------------------------|
| Static Pressure (psi) | Running Inlet Pressure (psi) | Running Outlet Pressure (psi) | Flow Rate (gpm) | Pressure Drop Across Unit (psi) |
| 10 | 4.9 | 0.0 | 2.2 | 4.9 |
| 20 | 15.6 | 0.1 | 4.1 | 15.5 |
| 30 | 24.3 | 0.4 | 5.3 | 23.9 |
| 40 | 33.5 | 0.8 | 6.1 | 32.7 |
| 50 | 42.3 | 1.2 | 7.0 | 41.0 |
| 60 | 50.5 | 1.6 | 7.6 | 49.0 |
| 70 | 62.3 | 2.1 | 8.5 | 60.2 |
| 80 | 70.9 | 2.5 | 9.1 | 68.4 |
| 90 | 79.3 | 2.9 | 9.5 | 76.5 |

