# AQUASPEC® FAUCETS


## MODEL - Z85500 SERIES DOUBLE FOOT PEDAL VALVE



## **TECHNICAL INFORMATION**

MAXIMUM PRESSURE: 125 PSI MAXIMUM TEMPERATURE: 180° F

**CARTRIDGE STYLE:** ZURN FOOT PEDAL CARTRIDGE

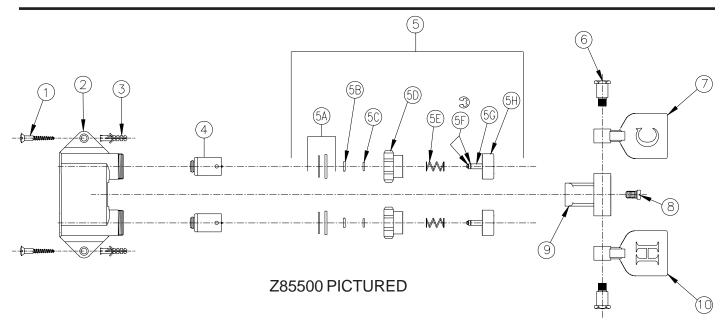

Item	Part Number	Description	Qty.
1	61817001	#12 1-1/2" Wood Screw	2
2	59965001	Body	1
3	62359001	Wall Anchor	2
4	G62682	F.P. Poppet Assembly	2
5	G61683	F.P. Cartridge Nut Assembly	2
5A	G65503	Cap Sealing Washer Assembly	1
	65432001	O-Ring	1
	65431002	Plastic Ring	1
5B	60458001	O-Ring Retainer	1
5C	62499107	O-Ring	1
5D	61057001	Cap	1
5E	61059001	Spring	1
5F	60464001	E-Ring	2
5G	61058001	Stem	1
5H	61082001	Push Button	1
6	59843001	Pivot Bolt	2
7	59844003	Short Cold Foot Pedal	1
8	59739001	Screw	2
9	59845001	Bracket	1
10	59844002	Short Hot Pedal	1 _

Form # CF148 Date: 8/12/05 C.N. No. 103089 Rev. B

### INSTALLATION INSTRUCTIONS

- 1. BE SURE SUPPLY LINES ARE THOROUGHLY FLUSHED BEFORE INSTALLATION.
- 2. REMOVE FOOT PEDAL VALVE FROM CARTON AND MOUNT TO WALL USING MOUNTING SCREWS, #22.
- 3. CONNECT OUTLET PIPING TO 3/8" NPT PORT ON TOP OF VALVE.
- 4. CONNECT SUPPLY PIPING TO 1/2" NPT STOPS. (ONLY WALL MOUNT UNIT PROVIDED WITH STOPS)
- 5. TURN SUPPLY WATER ON AND OPERATE FOOT PEDAL CHECKING FOR LEAKS.
- 6. IT MAY BE NECESSARY TO SHUT WATER OFF AND REMOVE CARTRIDGE TO CLEAN SUPPLY LINES. CARTRIDGE CAN BE REMOVED BY FIRST REMOVING THE F.P. CARTRIDGE NUT ASSY. (ITEM #5). THEN REMOVE F.P. POPPET ASSY. (ITEM #4), AND REPLACE F.P. CARTRIDGE NUT ASSY. (ITEM #5). RUN WATER TO CLEAN LINES.
- 7. AGAIN SHUT OFF SUPPLY WATER, REMOVE F.P. CARTRIDGE NUT ASSY. (ITEM #5) AND REPLACE F.P. POPPET ASSY. (ITEM #4). REPLACE F.P. CARTRIDGE NUT ASSY. (ITEM #5).

#### **MAINTENANCE**

- YOUR ZURN AQUASPEC FOOT PEDAL VALVE HAS A HIGHLY POLISHED NICKEL CHROME PLATED FINISH. CLEAN WITH SOAP AND WATER OR A MILD CLEANER WHICH IS SAFE FOR CHROME PLATING. DO NOT USE ACIDS OR TOILET BOWL CLEANER AS THEY WILL DAMAGE THE FINISH.
- AQUASPEC SLOW CLOSING FOOT PEDAL CARTRIDGE CAN BE SERVICED BY SHUTTING THE WATER OFF AND REMOVING F.P. CARTRIDGE NUT ASSY. (ITEM #5). REMOVE F.P. POPPET ASSEMBLY (ITEM #4). CHECK FOR WORN OR DAMAGED PARTS. THOROUGHLY CLEAN PARTS AND REPLACE.



ZURN INDUSTRIES, INC. ♦ COMMERCIAL BRASS OPERATION ♦ 2640 SOUTH WORK STREET ♦ FALCONER NY 14733
Phone: 1-716-665-1132 ♦ Fax: 1-716-665-1135 ♦ World Wide Web: www.zurn.com
In Canada: ZURN INDUSTRIES LIMITED ♦ 3544 Nashua Drive ♦ Mississauga, Ontario L4V1L2 ♦ Phone: 905/405-8272 Fax: 905/405-1292