




Z890 / Z895

SANI-FLO TRENCH DRAIN SYSTEM INSTALLATION INSTRUCTIONS

Dimensional data (inches and [mm]) are subject to manufacturing tolerances and change without notice.

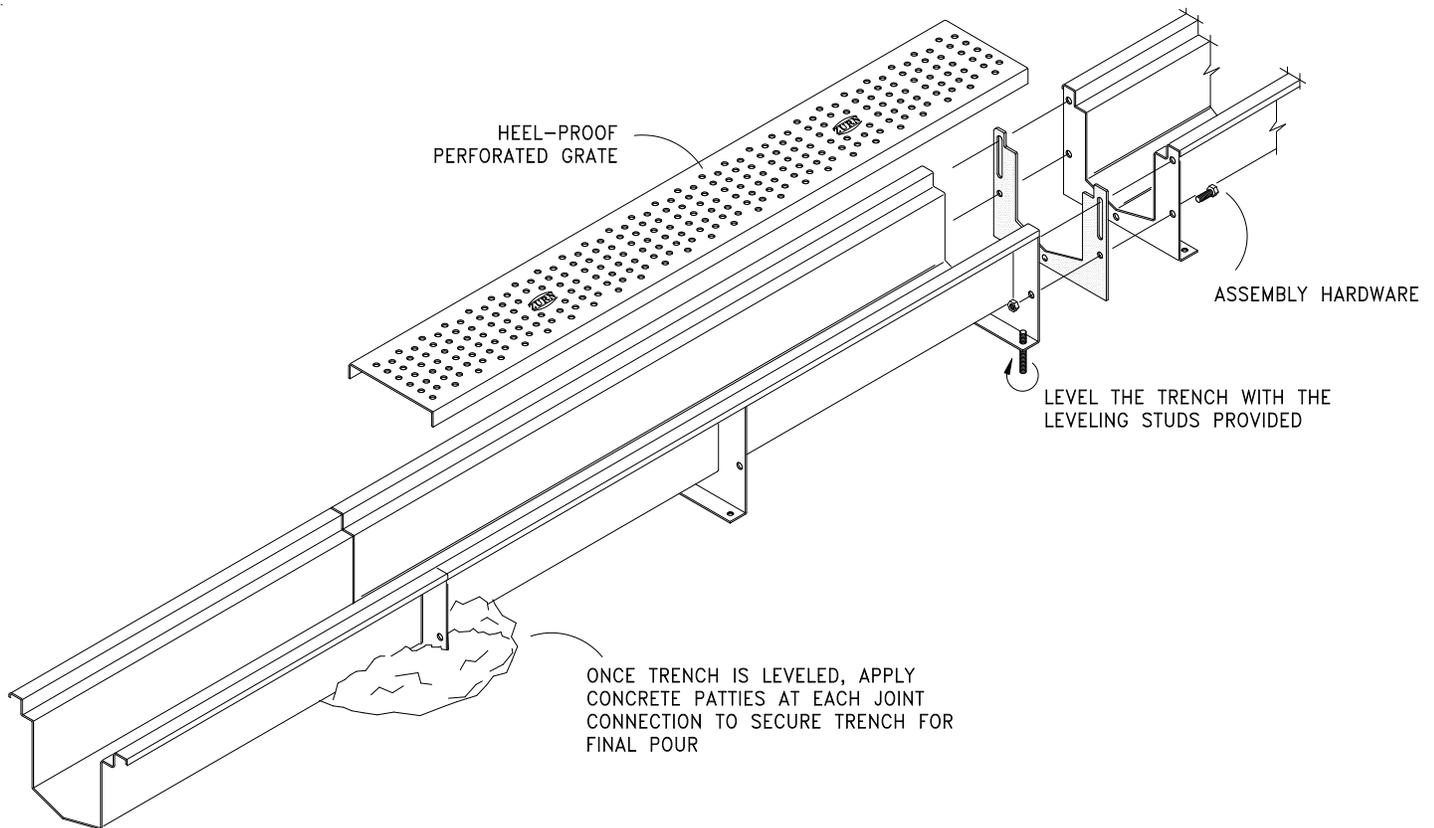

INSTRUCTIONS

1. Assemble the 5 foot modular sections as needed with the hardware provided.
2. Use leveling studs to set the trench run at the desired elevation.
3. Once entire run is assembled, a string line can be used to ensure a straight run.
4. Anchor the trench run prior to final pour with concrete patties at each joint.
5. Make final pour of concrete, vibrate concrete so that no voids are present. Also make sure concrete encapsulates the entire profile of the trench drain.
6. Allow for concrete shrinkage during finish troweling so that the top surface of the trench drain does not protrude from the floor surface after concrete has cured.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

⚠ ADVERTENCIA: Cáncer y daño reproductivo - www.P65Warnings.ca.gov

⚠ AVERTISSEMENT: Cancer et effets néfastes sur la reproduction - www.P65Warnings.ca.gov

Zurn Industries, LLC | Light Commercial
1801 Pittsburgh Avenue, Erie, PA U.S.A. 16502 · Ph. 855-663-9876, Fax 814-454-7929
In Canada | Zurn Industries Limited
3544 Nashua Drive, Mississauga, Ontario L4V 1L2 · Ph. 905-405-8272, Fax 905-405-1292
www.zurn.com

Rev. A
Date: 5/15/2018
C.N. No. 140024
Form No. FT150